


## EZ-Start : Remove five minute timer


The control EZ-Start with "blue paint" board (FRM A57), have a five minutes timer inside. This timer is to prevent damage to the compressor and the start capacitor for repetitive starting. The timer remain active for five minutes after the control has lost power. If the power is applied within five minutes, the lights indicate "power failure" until the timer expires.

When the EZ-Start is used with VECO controlers this timer is not necessary, in this case is possible remove that.

Cut the jumper JP2 in the center of electric board, in this case the compressor start after a few seconds since the control is powered.

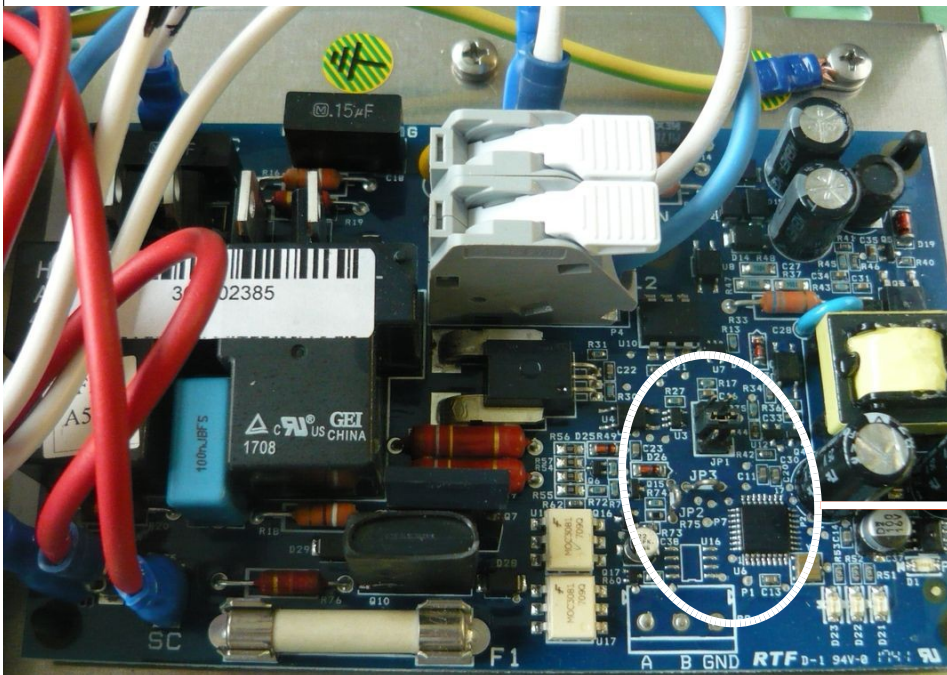

On the board there are three jumpers

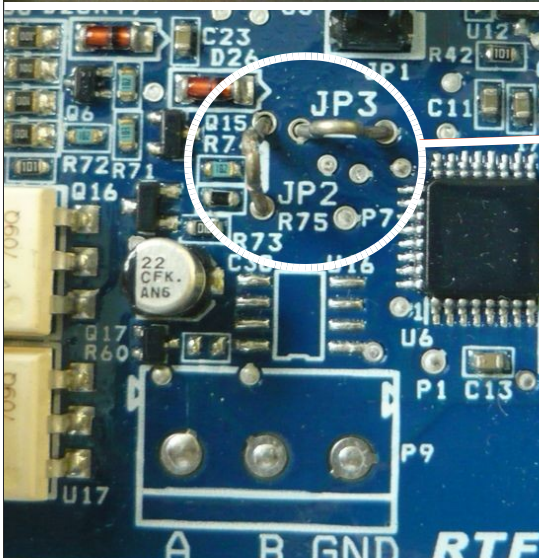

JP2 is close to JP3

Cut only JP2

