
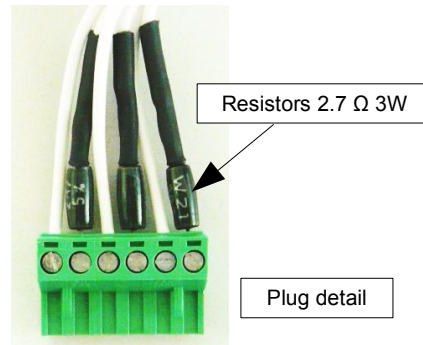


## FAN COIL CONTROL BOX MV8

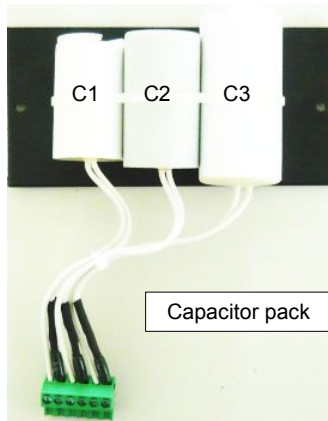

speed	1	2	3	4	5	6	7	8
relay	R1	R2	R3	R1+R2	R1+R3	R2+R3	R1+R2+R3	R4
capacitor	C1	C2	C3	C1+C2	C1+C3	C2+C3	C1+C2+C3	230V

### CAPACITORS DETAILS FOR MEVA SERIES FAN-COILS

Fan coil	RUN *	C 1	C2	C3
MEVA3	2	1.5	2	3.15
MEVA4.5	4	2	4	5
MEVA7	4	2	4	5
MEVA9	6.3	4	5	6.3
MEVA13	6.3	4	5	6.3
MEVA15S	2+2	4	5	6.3
MEVA17	8**	5	8	12.5
MEVA17S	6+6	5	8	12.5
MEVA24S	6+6	5	8	12.5

\* Run capacitor is installed on the connecting cable

\*\* Run capacitor is installed inside the blower scroll

### CAPACITORS DETAILS FOR MFC SERIES FAN-COILS

capacitor	RUN	C1	C2	C3
FC2	1.5			
FCV2.5	1.5			
FC4	3.15			
FCV5	3.15			
FC6	2			
FC8	4			
FCV9	2	1.5	2	3.15
FC12	4			
FC16	4	2	4	5
FC20	4	2	4	5

\* Run capacitor is installed inside the fan coil box